



RCFM-230D

Thermostat for fan-coil applications with on/off outputs and manual change-over function

RCFM-230D is a thermostat for controlling heating and/or cooling in 2-pipe installations. Setpoint and fan speed are set using the buttons on the front.

- Supply voltage 230 V AC
- Temperature control on/off, 230 V AC outputs
- Built-in relays for a 3-speed fan, 230 V AC

- Backlit display
- Input for occupancy detector or window contact
- Manual change-over via button on the front panel

RCFM-230D is a thermostat for controlling heating and/or cooling in a room via on/off outputs. It also has a 3-speed fan control function (for fan-coil).

The thermostat has supply voltage 230 V AC. It has triac outputs for 230 V AC heating/cooling and built-in 230 V AC fan relays, which means that a separate relay module is not required for the fan and actuators.

Applications

The thermostat is suitable in buildings where you want optimal comfort and reduced energy consumption, for example offices, schools, shopping centres, airports, hotels and hospitals etc.

Design

The thermostat has a modern design, inspired by the award-winning design of Regin's Regio controllers.

Simple installation

The modular design with a separate bottom plate for wiring makes the thermostat easy to install and commission. The bottom plate can be put into place before the electronics are installed. Mounting is directly on the wall or on a wall socket.

Control function

The thermostat controls heating and/or cooling in a room via on/off outputs. It has settable hysteresis, factory setting 1 K (°C). The setpoint can be changed using the INCREASE (▲) and DECREASE (▼) buttons on the front.

See also the section "Display information and handling" on page 2.

Built-in or external sensor


The thermostat has a built-in sensor. Alternatively, the input for an external PT1000-sensor can be used.

On/off control outputs

RCFM-230D has outputs for control of 230 V AC on/off actuators or similar.

2-pipe installations

In 2-pipe installations, the same water system is used for heating and cooling, depending on the season. Chilled water is distributed in the system during summer and heated water during winter RCFM-230D is intended for control of 2-pipe systems. Output DO4 is used for controlling heating or cooling (depending on the season (fluid temperature)) via an actuator, a valve or similar (change-over function).

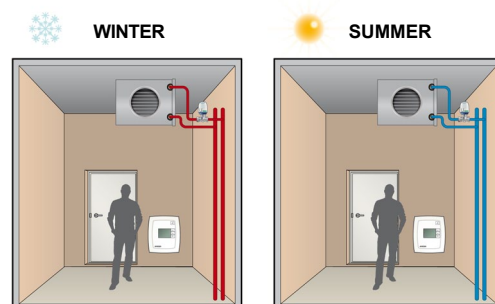

Manual switching between heating/cooling (change-over function)

The thermostat has manual change-over. By pressing the "M"-button on the front, the thermostat will be set to operate with heating or cooling function.

At heating function "HEAT" is shown in the display and at cooling function "COOL" is shown.

Occupancy detection for saving energy


By connecting an occupancy detector or a keycard switch (in hotels) to a digital input, it is possible to change between Comfort and Economy mode. This way you can control the temperature according to requirement, which saves energy and keeps the temperature at a comfortable level.

Using occupancy detection, it is possible to delay activation and/or inactivation of Comfort mode, to avoid switching mode if a person temporarily enters or leaves the room.

Alternatively, a window contact can be connected to the input. This sets the thermostat to Off if a window is open with the purpose of minimising energy consumption.


Operating mode

There are four different operating modes, Comfort, Economy (Standby), Off and Window. Switch-over between these modes is performed locally.

Comfort:  is shown in the display and the room is in use. The temperature is held at the comfort level with a neutral zone (NZC) between activation of heating and cooling (factory setting for NZC = 2 K (°C)).


Economy (Standby): "Standby" is shown in display. The room is in energy save mode and is not used at the moment. This can for example be during nights, weekends, evenings etc. or during daytime when there is no one in the room. The thermostat is prepared to change operating mode to Comfort if someone enters the room. The heating and cooling setpoints are freely adjustable. Factory settings: heating=15°C, cooling=30°C.

Off: "Off" is shown in the display and the backlight is switched off. The thermostat does not heat or cool and the fan is inactive, unless mould protection function has been configured, in which case the fan will continue to run. There is also a frost protection function for this operating mode, which will activate the heating output if the room temperature falls below +8°C. Off mode is selected by pressing the fan button until "Off" is shown in the display and the backlight is switched off.

Window:  is shown in the display. The thermostat is in Off mode but the display is lit.

Automatic fan speed control

The current fan speed is shown in the display and can be set manually to Low, Medium or High speed. It can also be set to Auto, which means that the fan speed is controlled by the difference between the setpoint and actual value of the room.

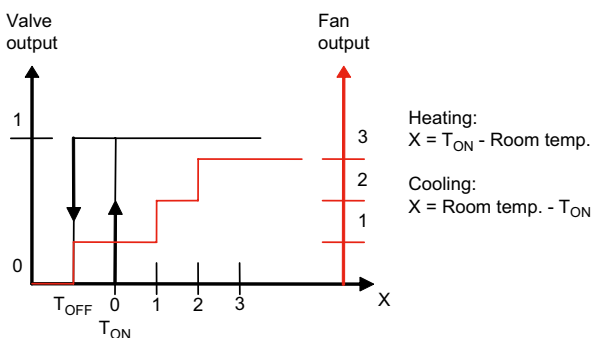

The fan speed can also be set to Off mode, which means that the control is switched off. The fan speed is set to Low→Medium→High→Auto→Off by pressing the fan button.

When there is no heating or cooling demand in the Auto position, the fan will run at the lowest speed. This can be changed in parameter 31 so that the fan stops when there is no heating or cooling demand. The fan is inactive in the Off and Window modes. However, it will continue to run if mould protection has been configured.

Mould protection


When this function has been configured, the fan will always run at the lowest speed and circulate air in the room to minimise the risk of mould growth in the fan-coil unit. The function is deactivated on delivery.

Automatic exercise of valves


The thermostat has a function for exercising the valves, even during periods when they are not being used, to ensure proper function. Every 23 hours (factory setting), the output is overridden to close for a moment in order to open and close the valves. The exercise interval can be set individually for heating and cooling. The exercise function can also be inactivated if desired.

Display information and handling

The display has the following indications:

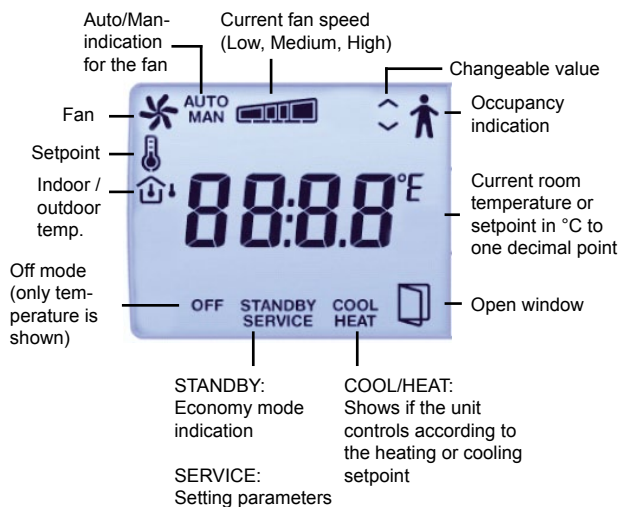

The display is handled using the buttons on the thermostat:

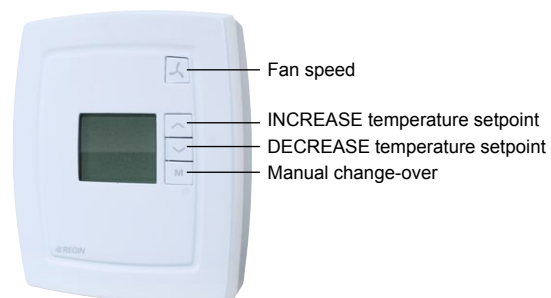

Fan button

By pressing the fan button, you set the fan speed to Low,

Medium, High, Auto and Off. In Off mode, the control function is also inactivated.

Setpoint buttons

The INCREASE and DECREASE buttons are used for changing the setpoint value. What is shown in the display can be configured via the parameter list. There are four alternatives:

1. The actual value is shown, or, when the setpoint has been changed via the INCREASE and DECREASE buttons, the setpoint value is shown in the display (together with the setpoint (thermometer) symbol).
2. The actual value is shown, or, when the setpoint has been changed via the INCREASE and DECREASE buttons, the setpoint adjustment value is shown in the display (together with the setpoint (thermometer) symbol).
3. The setpoint value is shown (factory setting).
4. The setpoint adjustment is shown.

When the setpoint adjustment is displayed (alternatives 2 and 4), the basic setpoint is 22°C.

The minimum limitation of the setpoint value is settable 5...22°C and the maximum limitation is settable 22...35°C.

Button for manual change-over (M-button)

By pressing the "M"-button, the running mode for the change-over function will be set to operate with heating or cooling function.

Configuration via the parameter list

The factory settings are changed in the parameter list shown in the display using the buttons on the thermostat.


The parameter values are changed with the INCREASE and DECREASE buttons and changes are confirmed with the fan button.

The parameter list can be found in the instruction for RCFM-230D.

Control principles


Control principle at cooling function

When the controller is set to cooling, the output is activated when the temperature rises above the setpoint by the set hysteresis. The output opens when the setpoint value is reached.

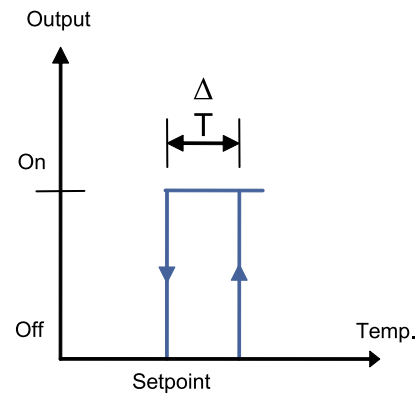


Control principle at heating function

When the controller is set to heating, the output is activated when the temperature falls below the setpoint by the set hysteresis. The output opens when the setpoint value is reached.

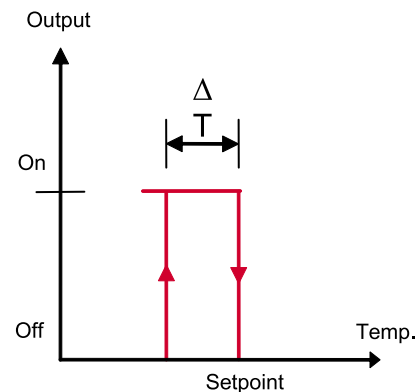

Technical data

Supply voltage	230 V AC $\pm 10\%$, 50/60 Hz
Power consumption	3 W, class II construction
Installation type	2-pipe
Ambient temperature	0...50°C
Storage temperature	-20...+70°C
Ambient humidity	Max. 90 % RH
Protection class	IP20
Pollution degree	2
Overvoltage category	3
Display	LCD with backlight
Built-in temperature sensor	NTC type, measuring range 0...50°C
Terminal blocks	Lift type for maximum cable area 2.1 mm ²
Material, casing	Polycarbonate, PC
Colour	
Cover	Polar white RAL9010
Bottom plate	Light gray
Mounting	Indoor, wall mounting, fits on a standard wall socket
Dimensions (HxWxD)	120 x 102 x 29 mm
Weight	0.18 kg
	This product conforms to the EMC and LVD requirements in the European harmonised standards EN 60730-1:2000 and EN 60730-2-9:2002 and carries the CE mark.

Inputs

External sensor, AI1	PT1000-sensor. Suitable sensors are TG-R5/PT1000, TG-UH/PT1000 and TG-A1/PT1000 from Regin. The setpoint range is 5...35°C.
Occupancy/window contact, DI1	Potential-free contact. A suitable occupancy detector is IR24-P from Regin.

Outputs

Fan control, DO1, 2, 3	3 outputs for speed I, II and III, 230 V AV, max. 3 A fan-coil
Valve, DO4	230 V AC, 300 mA max. (20 A max. 20 ms)



Settings

		Factory setting (FS)
Setpoint	5...35°C	22°C
Setpoint, min. limit	5...22°C	-
Setpoint, max. limit	22...35°C	-
Internal sensor calibration	-10 K...10 K	0 K
External sensor calibration	-10 K...10 K	0 K
Hysteresis	0.5...50 K	1 K
NZC, neutral zone at Comfort	0.1...10 K	2 K
Input DI1	Normally open (NO) or normally closed (NC)	NO
Output DO4	NO or NC	NC
Valve exercise	Individually settable for heating and cooling outputs	23 hours interval

Wiring and dimensions

10	L	230 V AC Line	Supply voltage
11	NC	Not connected	
12	N	230 V AC Neutral	Power supply (internally connected to terminal 13)
13	N	Fan-coil common / 230 V AC Neutral	Common fan-coil connector (internally connected to terminal 12)
20	DO1	Fan-coil output 1 for fan control	Relay, 230 V AC*, 3 A
21	DO2	Fan-coil output 2 for fan control	Relay, 230 V AC*, 3 A
22	DO3	Fan-coil output 3 for fan control	Relay, 230 V AC*, 3 A
30	NC	Not connected	
31	DO4	Digital output 4 for heating/cooling	Digital output. 230 V AC, max. 300 mA. Max. 2 A during 20 ms.
32	CDO45	Common DO4 & 5	Common connection for digital outputs 4 and 5
33	DO5	Not connected	
40	DI	Digital input	Floating (potential-free) window contact or occupancy contact. Configurable for NO/NC.
41	0 V	Analogue ground	
42	AI	Analogue input	External PT1000 instead of the internal NTC
43	UI	Not connected	
44	0 V	Analogue ground	
50-52	NC	Not connected	
53-54	NC	Reserved for future use	

*The sum of the current through DO1-DO3 is protected by a fuse

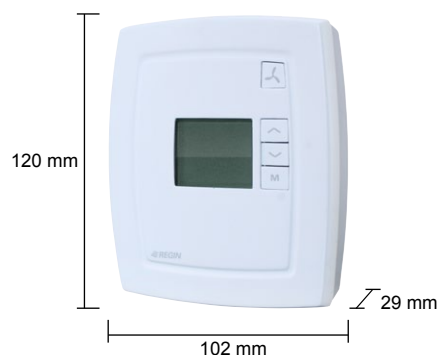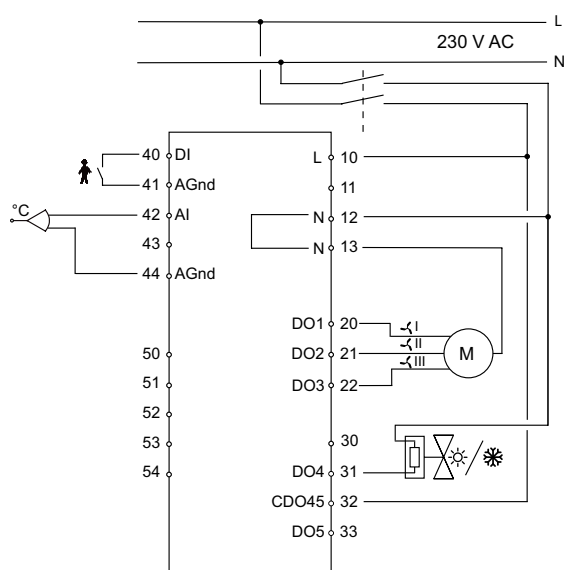

Product documentation

Document	Type
RCFM-230D_inst_en_sv	Instruction for RCFM-230D

The product documentation is available for download from Regin's website, www.regin.se.

Head Office Sweden

Phone: +46 31 720 02 00

Web: www.regin.se

Mail: info@regin.se

Sales Offices

France: +33 1 41 71 00 34

Germany: +49 30 77 99 40

Spain: +34 91 473 27 65

Hong Kong: +852 24 07 02 81

Singapore: +65 67 47 82 33



THE CHALLENGER IN BUILDING AUTOMATION